

KL1000

user guide

First time use

enter code 2 2 4 4 and the blue light will blink
turn the lock clockwise

Changing the password

(note the locker must be open so the # key is visible)
press # current password blue light will blink
enter new password blue light will blink
enter new password again and blue light will blink twice

Forgotten password

press # master password and blue light will blink
press 0 2 and blue light will blink
enter new password and blue light will blink twice



PROGRAMMING LOCKER

default password is 2 2 4 4 default master code is 1 1 3 3 5 5 7 7