

# MAINTENANCE RULES

hushwall HSM-SM-001

## 1 INSTALLATION

For the correct installation method and the number of parts, refer to the assembly instructions.

Assembly and disassembly should be carried out by a trained assembly team, according to the attached assembly instructions, and with the specified tools.

## 2 FELT PANEL

Avoid spot rubbing (abrasion) on felt-upholstered parts that may cause pilling.

## 3 ROLLER DOOR

Avoid storage of bulky items in the cabinet. Any components that obstruct the roller travel can bend the roller door and cause it to fail irreversibly upon impact.


## 4 OPERATION

Remember to use our products in dry indoor locations. The following factors can have negative impact on the products:

- Exposure to water;
- Prolonged exposure to sunlight;
- Relative humidity of air above 70%.

## 5 POWER SUPPLY

An extension cable or power strip is required to connect a wall-mounted TV/display. The cable entry located in the bottom rim allows the power cord for the TV/display to be fed from underneath the wall to the floor box.

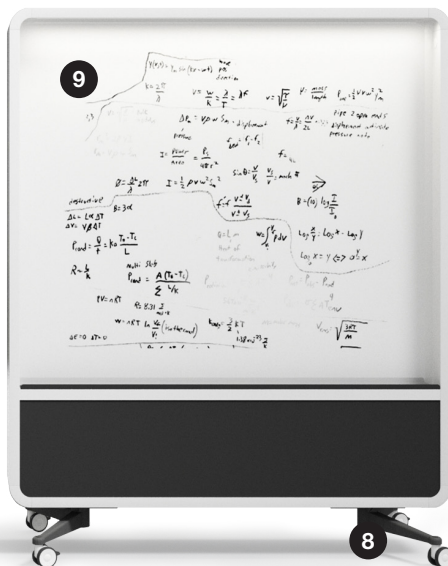

## 6 SURFACE

It is recommended to move the product over hard or carpeted floors.

Any difference in level or surface irregularities that the wall rolls over may damage the mobile base-to-body connection.

## 7 INSTALLING THE TV MOUNT PLATE ON THE PANEL

Maximum TV screen size/weight: 55"/20 kg.  
At least 4 5x20 wood screws are recommended. It is recommended to remove the felt panel as shown in the assembly instructions

## 8 MOBILE CASTOR BASE

The brakes on the castors must be applied to stabilise the wall at its intended location.

Apply at least two of the brakes to achieve minimum wall stability. To relocate the wall, remember to release the brakes. Leaving the brakes applied while trying to relocate the wall may result in irreversible damage to the casters or rip out and damage the TV/display power cord.

## 9 WHITEBOARD

Pointed, sharp or rough (abrasive) objects can damage the whiteboard coating.

It is recommended to avoid any exposure of the whiteboard face to corrosive or paint-dissolving chemicals, or chemicals which contain acetone or ethyl alcohol

# SAFETY INSTRUCTIONS

hushwall HSM-SM-001




## BODY

Clean the surface from top to bottom with a moist microfibre cloth once a week. The microfibre material will not leave lint behind and will prevent streaks.

If any liquid is spilled on the product, wipe it off immediately before it dries.

Do not use any abrasive cleaning products, such as scouring powders, pastes or creams, which may scratch the surface.

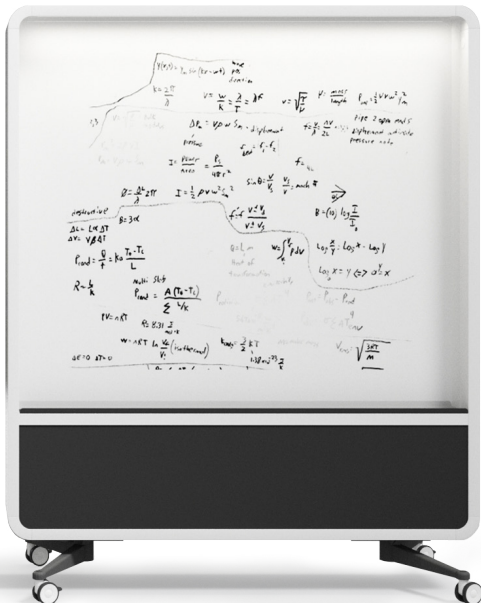

## FELT PANEL

Every six months, vacuum clean the surface from top to bottom.

Other cleaning methods:

- Upholstery/clothing lint roller;
- Dusting off with a clean, soft brush.

The felt must not be soaked with liquids; clean it gently with a moist microfibre cloth. Do not rub the felt for too long in one place.

## WHITEBOARD

Clean the whiteboard as often as needed with a dedicated cleaning product. Solvent-based chemicals may damage the surface.

**AWM**

**AWM  
AMARO**