


Pinnacle Workstations.

Paddle User Guide

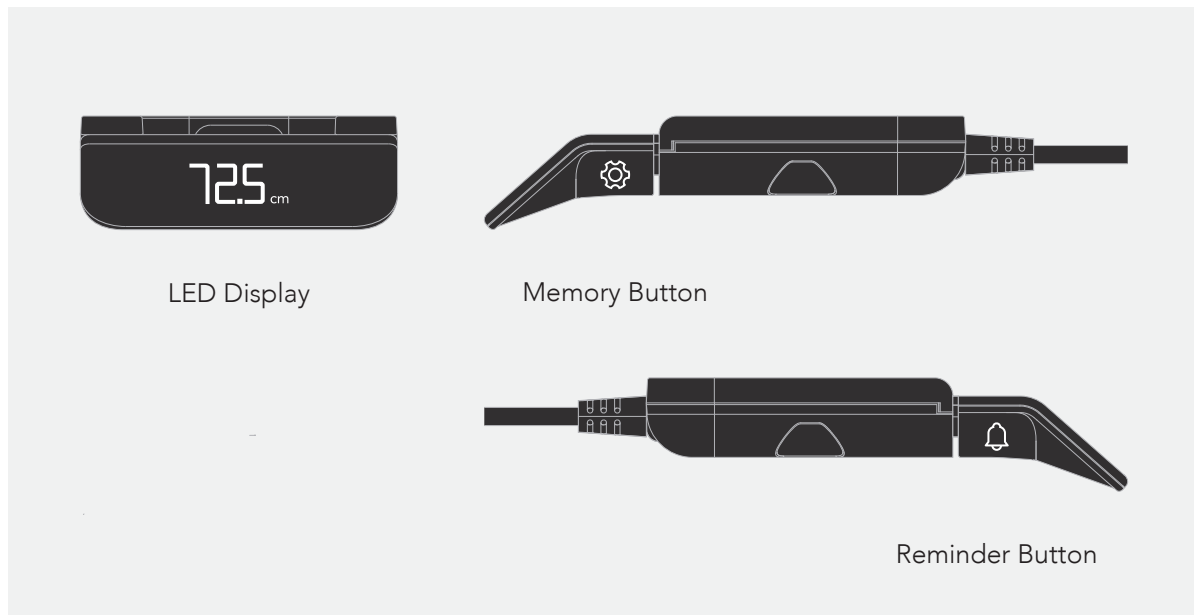

Pinnacle electronic sit-to-stand workstations are fitted with a Paddle Handset for operation. Pinnacle workstations can be raised and lowered to suit your ideal desktop height for both seated and standing positions.

Before you use your Desk

When first using a desk ensure that the full range of motion of the desk can be achieved without fouling any objects kept either above or below the desktop.

Items that may impact the desk include anything directly above or below the desktop, particularly metal storage units and personal items kept below desk, and overhead shelves or screen accessories found above desk.

In the event of an obstruction, Pinnacle handsets are fitted with anti-collision sensors and the desk will automatically travel either up or down away from any interference. Such a collision may result in an error message displaying on the handset which may require the handset to be reset.

Using Your Desk

The Pinnacle Paddle controller will lock after five seconds of non-use to prevent any

accidental movement. To unlock the handset, first tap the controller if the display is blank to wake it from power save mode. Then double tap the controller either up or down. The lock icon will unlock before displaying the current height.

Pressing and holding the controller up or down will adjust the desk height in the respective direction. Release the controller to stop the desk at the desired height.

Main Menu

To access the main menu, press and hold the Memory Button for five seconds. The display will show a loading icon during the five seconds.

The main menu has four options which can be scrolled through by pressing up or down on the handset. Enter each option by pressing the Memory Button.

- | | | |
|----|---------------------------|--|
| 1. | Reminder Settings | |
| 2. | Workstation Height Limits | |
| 3. | Vibration Settings | |
| 4. | Return | |

Pinnacle Workstations.

Paddle User Guide

Memory Button

The Memory Button is on the right-hand side of the controller. The handset can be programmed with two memory positions to suit your sitting and standing heights.

To set memory positions, first raise or lower your desk to the desired height. Press the Memory Button once to enter the Memory settings screen (a), press the Memory Button again to save the current height. Heights above 90cm will be saved as position '1' (b), and heights below 90cm as position '2' (c).



With a sitting and standing memory position set and the handset unlocked, simply double tap the handset up or down and the desk will move automatically to your respective upper or lower saved position.

Reminder Settings

The Reminder Button is on the left-hand side of the controller, pressing it will turn on/off the reminder function. Once turned on, the controller will give you a reminder after a set period of time to stand up, showing a timer since the desk was last raised.

The default time for the reminder is set to 30 minutes. This can be adjusted in the Main Menu within Reminder Settings, pressing up or down on the paddle to adjust the time interval.



Vibration Mode

With the Vibration Mode on, the handset will vibrate for 25 seconds or until the handset is pressed as a reminder to raise or lower your desk. There are two vibration settings to choose from, alternatively the vibration function can be turned off.

Access Vibration Mode in the Main Menu to scroll through the options, the handset will

give a vibration demonstration for each setting as you scroll through them. Press the Memory Button to select your preferred mode.



Workstation Height Limits

The upper and lower height limits of Pinnacle workstations are set during installation. If these height limits need to be adjusted or reset first move your desk to the desired upper or lower height. Enter the Workstation Height Limits within the Main Menu and scroll to either MAX or MIN to suit. Press the Memory button to confirm. A tick icon will show on the LED Display to confirm.



Resetting the Handset

Before resetting the handset ensure there are no obstructions beneath the desk as the anti-collision sensor does not work during the reset process.

To reset, press and hold down on the handset for approximately five seconds until the display reads 'RESET'. Press and hold the handset down again until the desk lowers in height before rising again and stopping.

If only one leg moves during the reset process immediately release the handset and **do not continue with the reset process**. It will be necessary for an AWM Service Technician to continue with the process to avoid damage to the workstation.

Technical Support

For technical support and service enquiries please contact the AWM Service team at service@awm.net.au