

Seat Tilt Adjustment

To prevent the seat from tilting, pull up on the left hand side paddle.
To unlock the tilt mechanism, push down on the left hand side paddle.



Seat Height

While seated, lift the right hand side paddle to lower the seat. Support your own weight off the seat while lifting the paddle to raise the height.

Seat Tilt Tension

To increase the seat tilt tension rotate the knob on the right hand side clockwise. To decrease the tension, rotate the knob anti-clockwise.

AWM. AMAROO User Guide

P. 1300 475 217